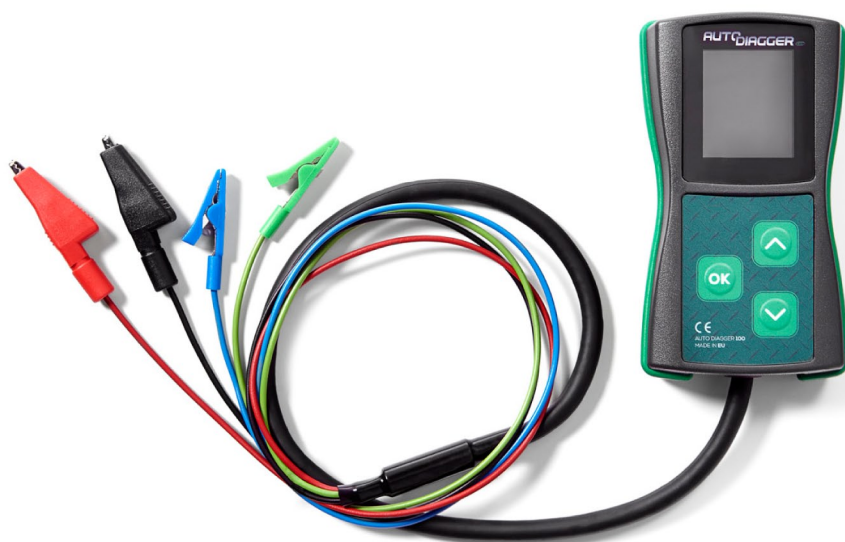
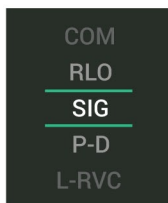

AUTODIAGGER.com



AUTODIAGGER 100

Instrukcja obsługi / Operating manual / Инструкция по эксплуатации

Main screens



Interface selection screen

selected interface, arrow selection, confirmation by the OK button



Testing screen

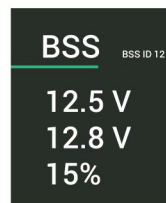
selected interface
set voltage
voltage in the system
load value

Additional screens (they appear when the connection with the controller is established)



LIN testing screen

LIN protocol version
manufacturer
controller class



BBS testing screen

controller ID

Operation

LIN, BSS - in order to test the controllers of this type, connect the green cable to the control input and select the COM interface.

RLO, SIG, P-D, L-RVC - in order to test analogue controllers, connect the green cable to the control input and the blue cable to the input informing on the current alternator loading (DFM, FR). Next, select the desired interface:

RLO - Toyota P-D - Mazda
SIG - FORD L-RVC - GM

Buttons



used to confirm the selected testing interface; if pressed during a test; you will go back to the interface section menu



in the interface selection menu, used to change the selected interface;



if pressed during a test, the value of the set voltage will be changed;

Connectors

